


 **PIONEER**

Service Manual


**ORDER NO.
CRT-446-0**
COMPONENT CAR STEREO AUTOMATIC SOUND LEVELIZER

ASL-E03

EW

SPECIFICATION

Power source DC 14.4V (10.8~15.6V allowable)
Grounding system Negative type
Dimensions 150(W)×25(H)×133(D) mm
Weight 0.6kg
Volume range 16 dB (ASL in operation)
Distortion 0.06% (1kHz, 70mV)
Frequency response 20~30,000Hz (±3 dB)

Signal-to-noise ratio 85 dB (IEC-A network)
Input impedance 25kΩ
Output impedance 1.5kΩ

Note

Specifications and the design are subject to possible modification without notice due to improvements.

PIONEER ELECTRONIC CORPORATION 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153, Japan
PIONEER ELECTRONICS (USA) INC. P.O. Box 1780, Long Beach, California 90801 U.S.A.
TEL: (800) 421-1404, (800) 237-0424
PIONEER ELECTRONIC (EUROPE) N.V. Keetberglaan 1, 2740 Beveren, Belgium TEL: 03/775-28-08
PIONEER ELECTRONICS AUSTRALIA PTY. LTD. 178-184 Boundary Road, Braeside, Victoria 3195, Australia
TEL: (03) 580-9911

ET ©JULY 1984 Printed in Japan

CONTENTS

1. PARTS LOCATION.....	1	6. CIRCUIT DESCRIPTION.....	6
2. NAME OF PARTS AND THEIR FUNCTIONS.....	2	7. CONNECTION DIAGRAM.....	11
3. CONNECTION.....	3	8. SCHEMATIC CIRCUIT DIAGRAM.....	14
4. DISASSEMBLY.....	4	9. EXPLODED VIEW.....	16
5. ADJUSTMENT.....		10. ELECTRICAL PARTS LIST.....	19
5.1 GAIN Adjustment.....	5	11. PACKING METHOD.....	21
5.2 LED GAIN Display Adjustment.....	5		

1. PARTS LOCATION

NOTE:

- For your Parts Stock Control, the fast moving items are indicated with the marks ★ ★ and ★.
★ ★: GENERALLY MOVES FASTER THAN ★.
This classification shall be adjusted by each distributor because it depends on model number, temperature, humidity, etc.
- Parts whose parts numbers are omitted are subject to being not supplied.

Connector (INPUT)
CDF-764

Connector (OUTPUT)
CDF-763

Volume (INTENS)
★ ★ CCS-404

Switch (O I)
★ ★ CSG-220

Switch (SENS, DP)
★ ★ CSG-220

Grille Assy
CXD-331

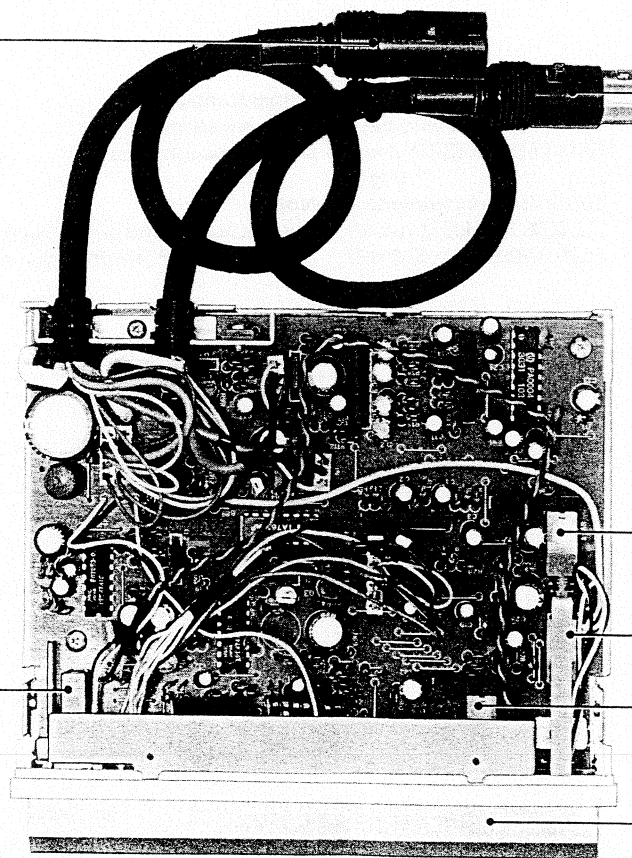


Fig. 1

2. NAME OF PARTS AND THEIR FUNCTIONS

① ASL Intensity Control

Set this button while driving.

Press this button and it will come up (■) for adjustment. Turn the button to the left or right to set the desired gain for the driving noise level. (For safe driving, have a passenger make this adjustment.)

② Power Level Indicator

This power level indicator displays the deck output level, and when the "0" is lit on the indicator the deck output is 4mV. Furthermore, when used with the GM-E04 main amp, "0" is equivalent to 40mW (when ASL is OFF).

③ Power Switch for Automatic Sound Levelizer (ASL)

④ Display Power Switch

⑤ Interior Mike

⑥ ASL Sensitivity Switch

This switch is generally used in the HIGH (■) position. For vehicles that seem to idle noisily, use in the LOW (■) position.

⑦ ASL Gain Indicator

Gain change is indicated when the power switch for Automatic Sound Levelizer is ON.

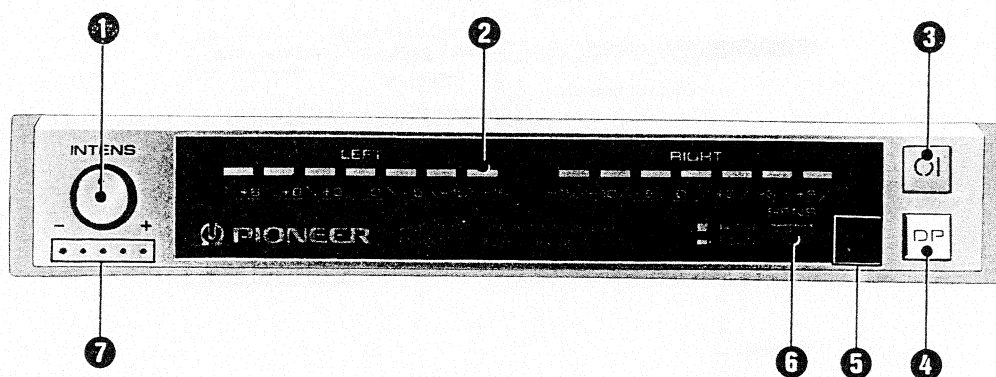


Fig. 2

3. CONNECTION

- Before making final connections, make temporary connections then operate the unit to check for any connecting cord problems.
- Refer to the main amp instruction manual for details on correct connection of speakers and power supply.
- Don't run the leads of the input cord of this unit and the main amp speaker leads close together. If you do, the deck or tuner will generate unwanted noise.
- When connecting this unit to the optional GTS-X80 (MFB Subwoofer System), make the connections as shown in the following figure and the low frequency range ASL will operate to mask running noise.

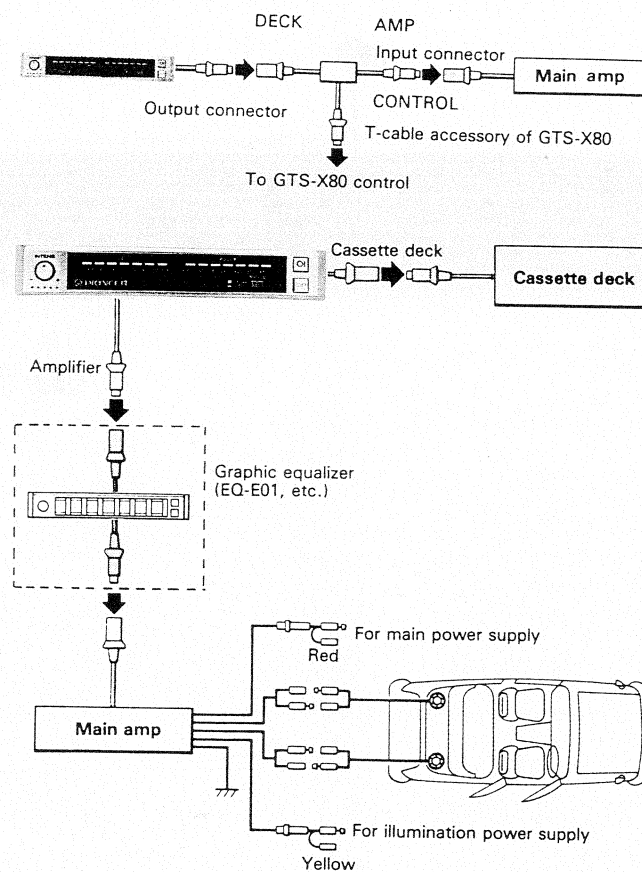


Fig. 3

4. DISASSEMBLY

• Removing the Case

1. Remove the three screws shown, then remove the case in the direction indicated by the arrow (Fig. 4)

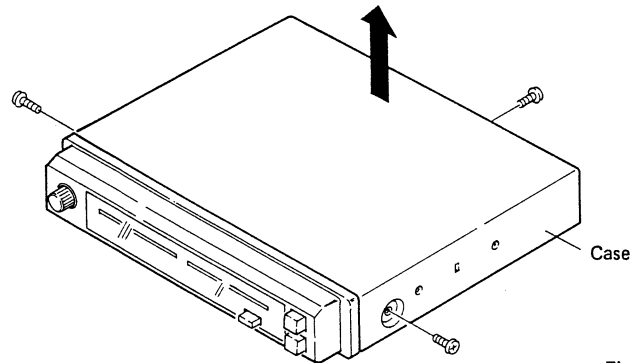


Fig. 4

• Removing the Grille Assembly

1. Removing the two screws shown, then pull the grille assembly out in the direction indicated by the arrow. (Fig. 5)

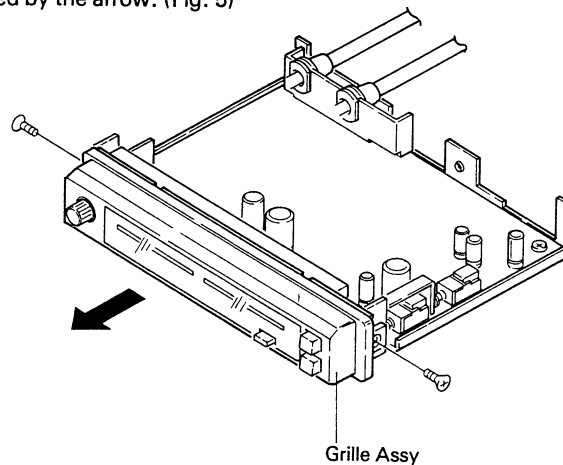


Fig. 5

• Removing the P.C. Board Assembly

1. Remove the four screws shown, then remove the P.C. Board assembly in the direction indicated by the arrow. (Fig. 6)

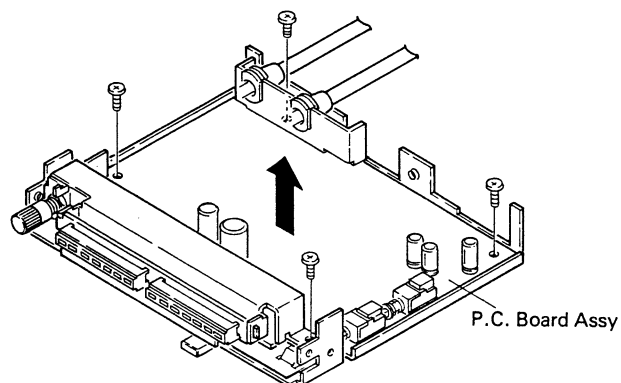


Fig. 6

5. ADJUSTMENT

• Connection Diagram

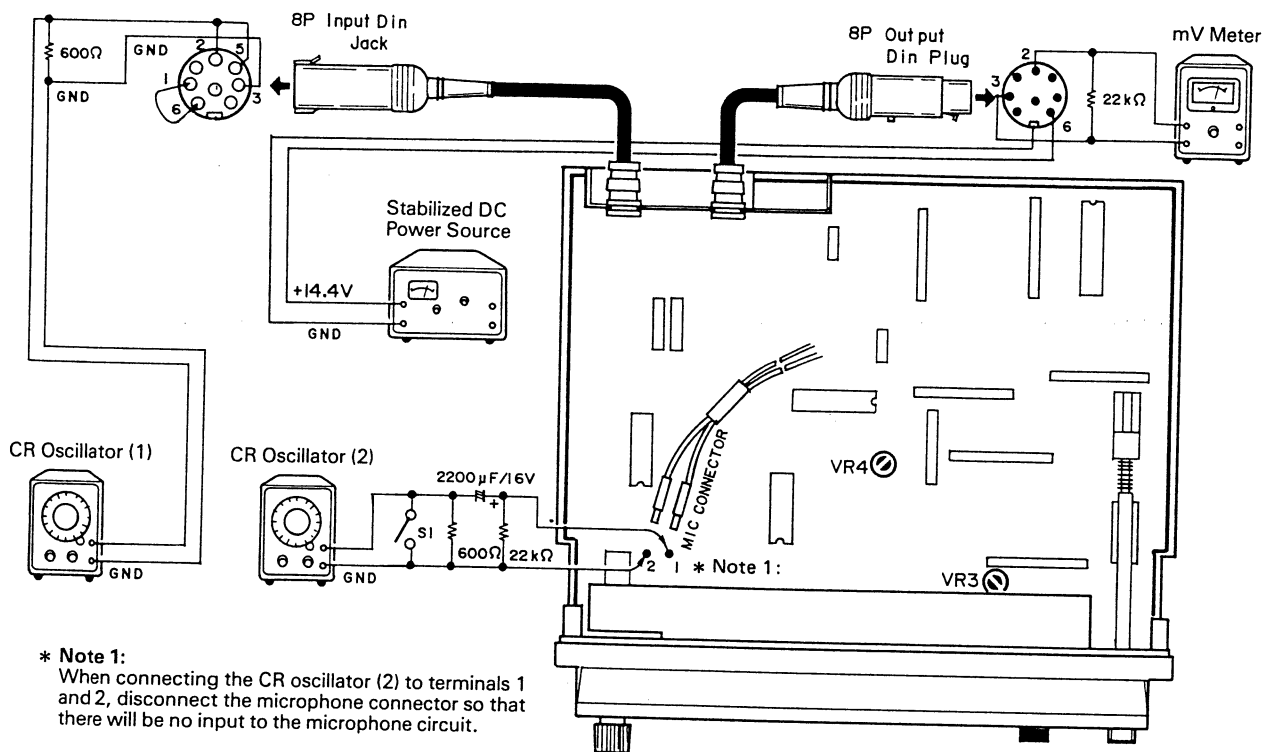


Fig. 7

5.1 GAIN ADJUSTMENT

• To Adjustment

Volume, Switch position

INTENS Volume Minimum setting
SENS Switch Low
ASL Switch OFF

1. Turn on switch S1 which is connected to CR oscillator (2) shorting the circuit. (CR oscillator (2) will not be used.)
2. With a 1kHz, -20dBs (77.5mV) signal from CR oscillator (1), adjust VR3 so that the mV-meter will register -20dBs (77.5mV).


5.2 LED GAIN DISPLAY ADJUSTMENT

• To Adjustment

Volume, Switch position

INTENS VOLUME Maximum setting
SENS VOLUME HIGH
ASL VOLUME ON

1. Use a 1kHz, -30dBs (24.5mV) signal from CR oscillator (1).
2. Turn OFF switch S1 which is connected to CR oscillator (2). Using a 15Hz signal, adjust the output of CR oscillator (2) so that the mV-meter registers -14dB.
3. Next, adjust VR11 so that the 5th LED of the gain display LEDs will light up.

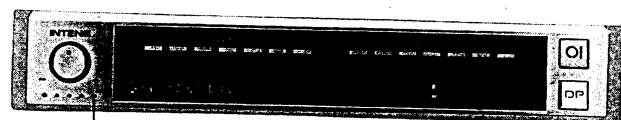

5 th LED

6. CIRCUIT DESCRIPTION

• Block Diagram

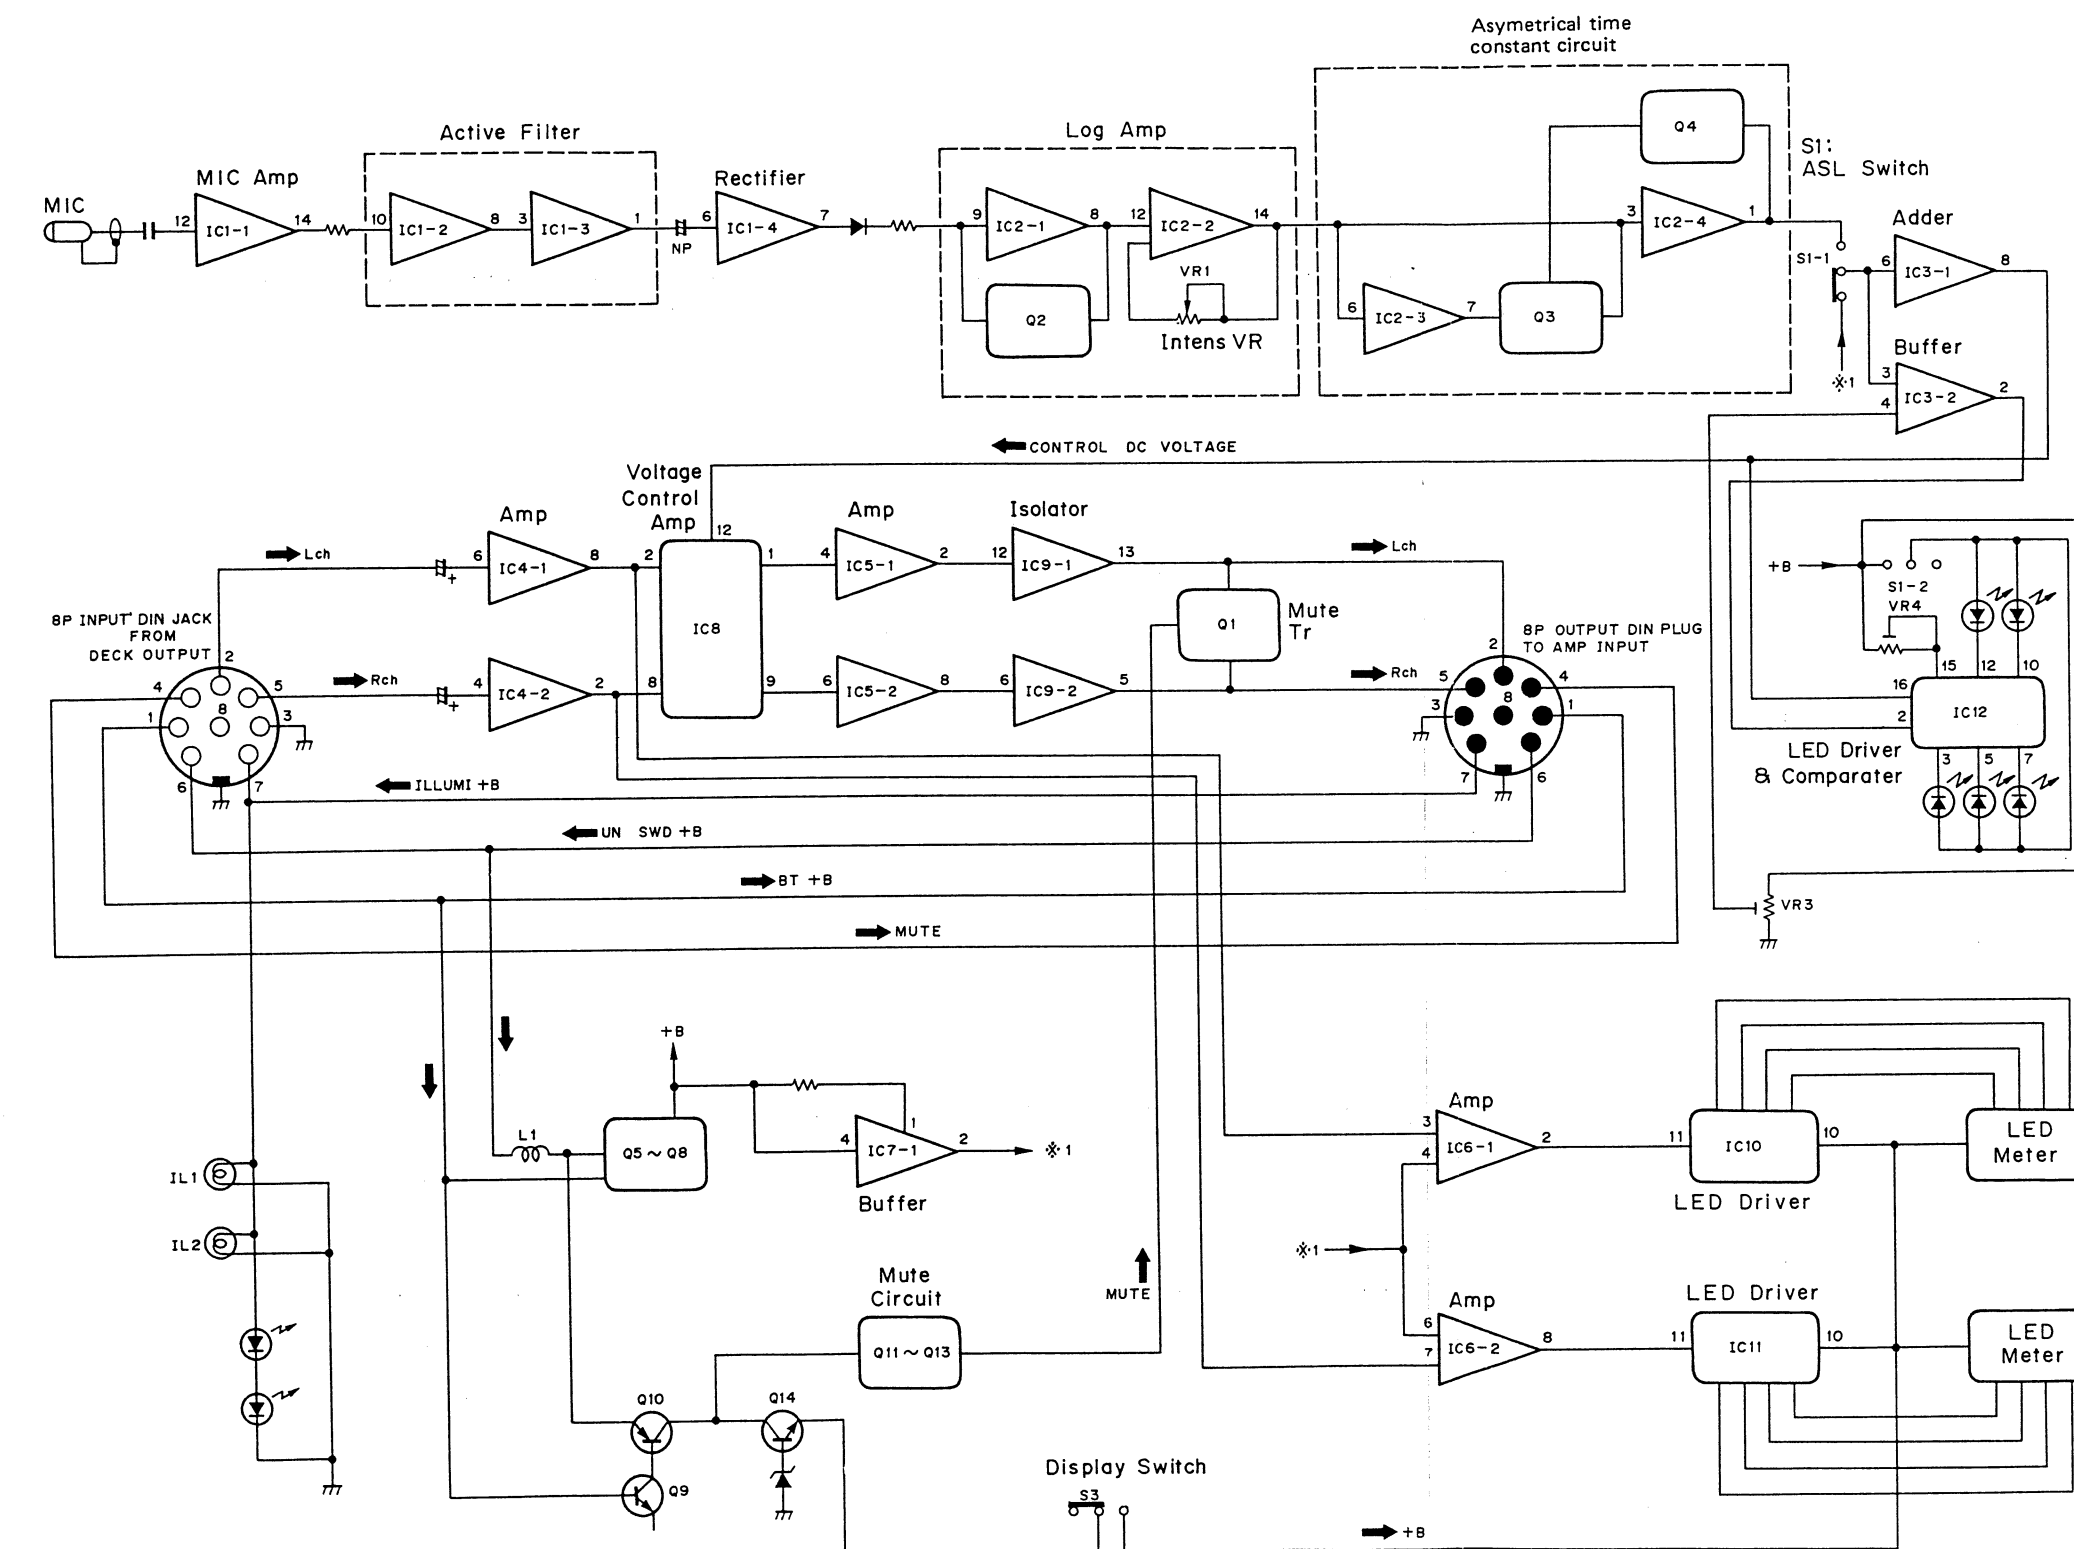


Fig. 8

• Gain adjustment with a combination of the noise level inside the vehicle and the ASL (Auto Sound Levelizer) operation.

The following is a brief explanation about the ASL (Automatic Sound Levelizer) system.

The ASL detects the noise inside the vehicle through a built-in microphone. After amplifying the reproduced sound to the approximate level, the noise level in the car is compensated for. Then, the system automatically amplifies the sound with the electronic volume control in proportion to the noise level. Thus, since automatic control is always carried out while the ASL is on, you do not have to make frequent volume adjustments while driving but can fully concentrate on your driving.

Gain change by vehicle interior noise and ASL (Automatic Sound Levelizer) operation.

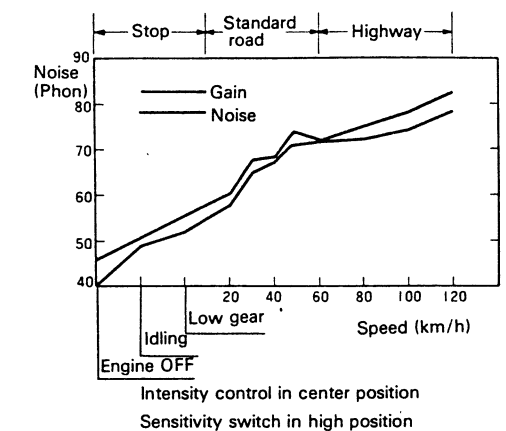


Fig. 9

• Sense and Intense controls

While the ASL circuit is in operation, the relationship between the gain and the noise is as shown in figure 10. The intense control controls the rate of gain increase (i.e., the slope of the gain curve), and the microphone sense control determines the noise level at which the ASL circuit starts operation.

The sense control is usually set to the HIGH position. When the unit is used in an automobile with a high noise level, the control is set to the LOW position.

The intense control can be adjusted to the user's preference.


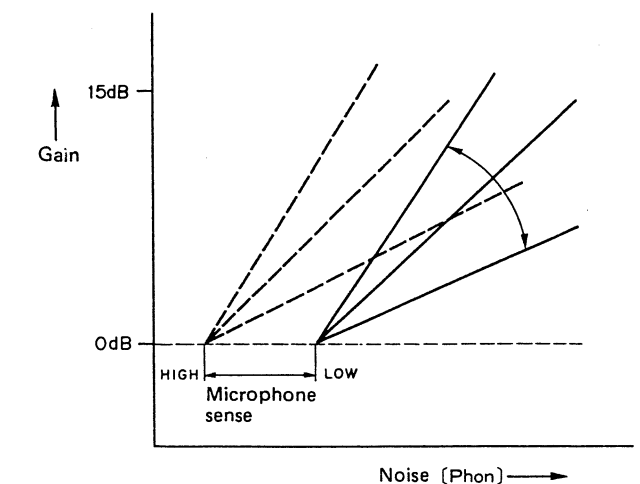


Fig. 10

• Audio signal path (Lch)

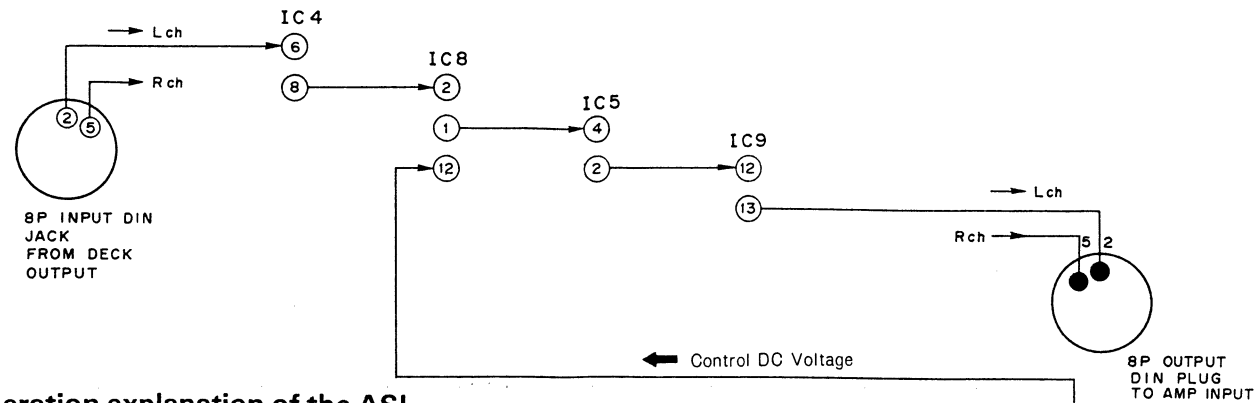

• Operation explanation of the ASL (Auto Sound Levelizer)

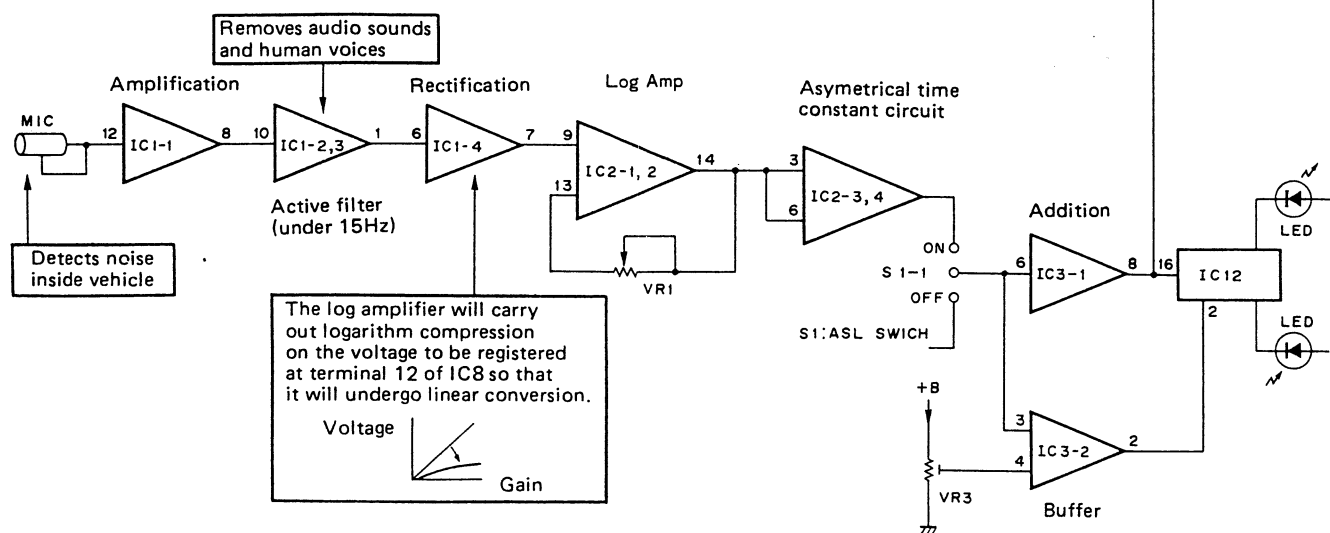


Fig. 11

• Level diagram


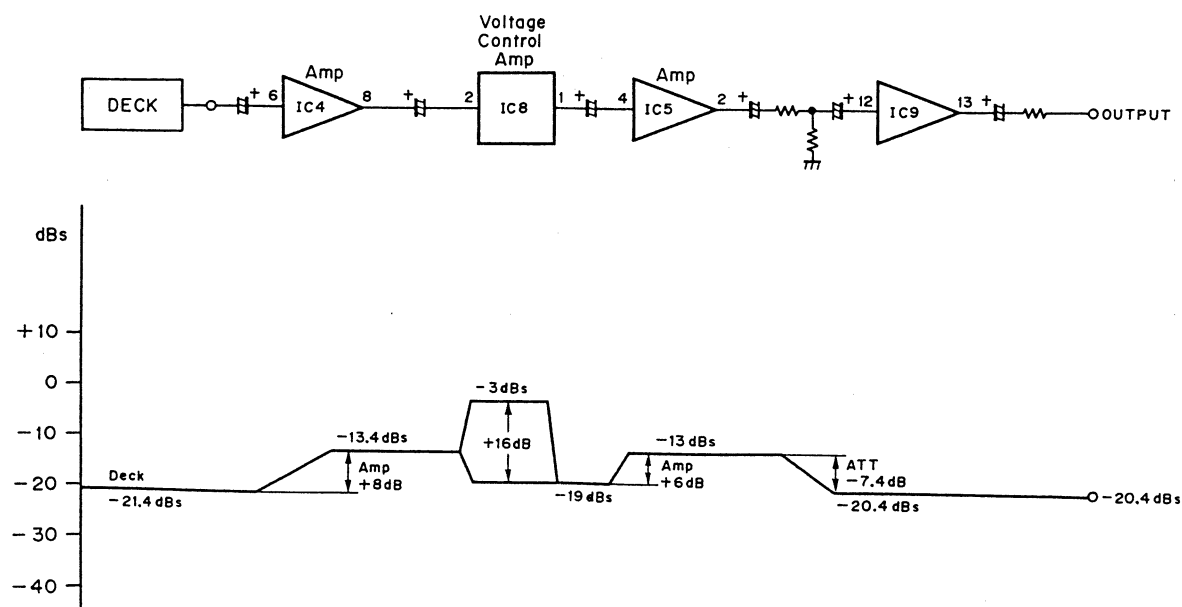



Fig. 12

• IC's and Transistors


2SC1583
2SA798

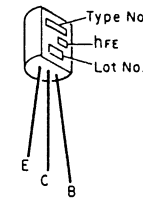


2SC2634NC

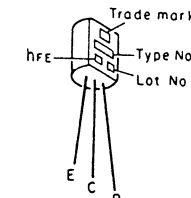


2SC1627
2SC1815
2SA608NP

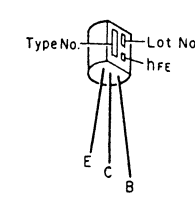


2SB632

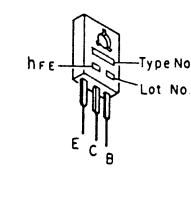


2SB647
2SD667A

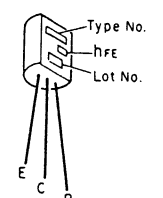


IC1, IC2: μ PC4741C
(TA75902P)

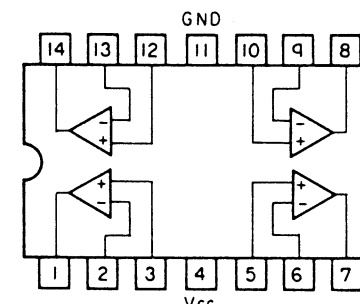


IC3~IC7: TA75558S

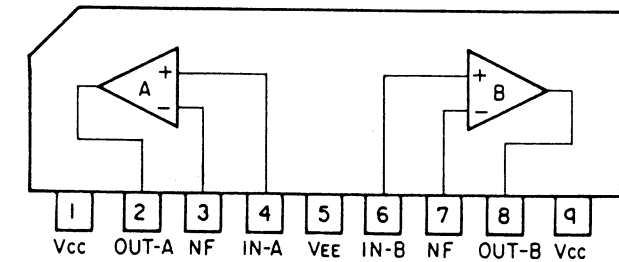

IC9: PA2014

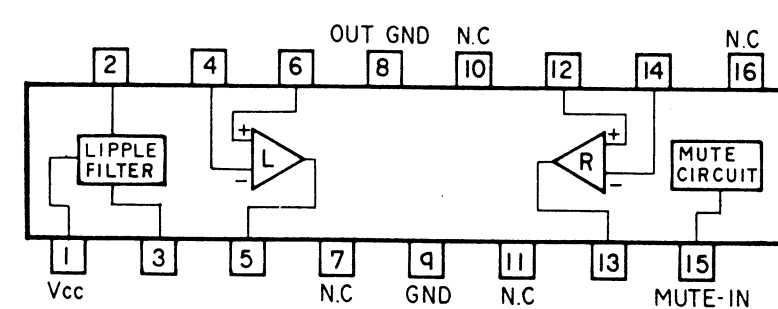

IC8: PA0004

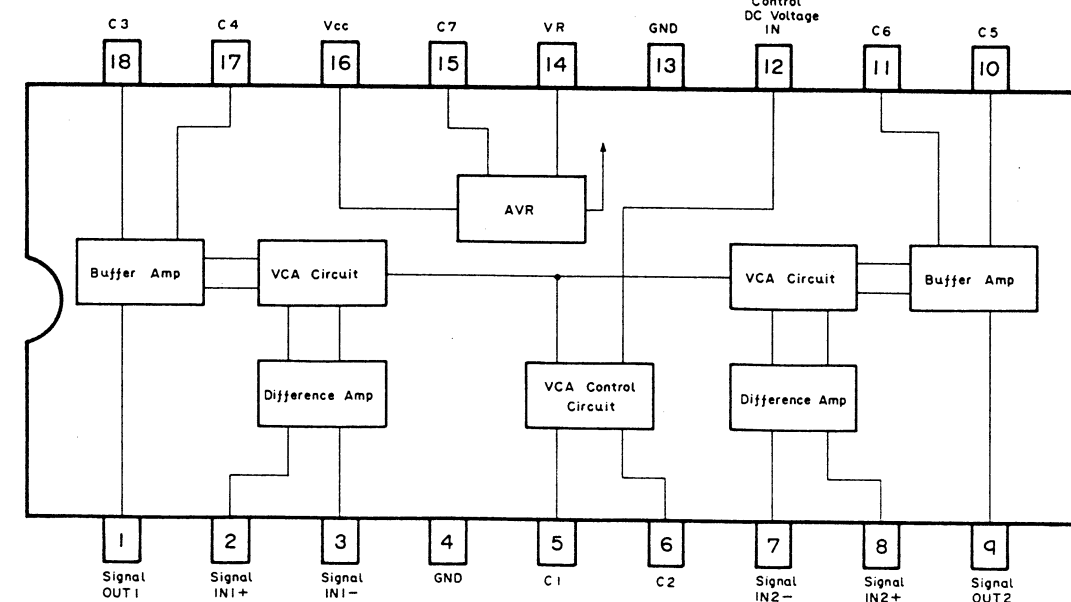


• Terminals and functions of PA0004


Terminals	Terminal Name	I/O	Function
1	Signal OUT 1	Output	Channel 1 output terminal
2	Signal IN 1 +	Input	Channel 1 + input terminal
3	Signal IN 1 -	Input	Channel 1 - input terminal
4	GND		Ground terminal
5	C1		Noise prevention capacitor terminal
6	C2		
7	Signal IN 2 -	Input	Channel 2 - input terminal
8	Signal IN 2 +	Input	Channel 2 + input terminal
9	Signal OUT 2	Output	Channel 2 output terminal
10	C5		Channel 2 phase compensation capacitor terminal
11	C6		

Terminals	Terminal Name	I/O	Function
12	Control DC Voltage IN	Input	Control voltage input
13	GND		Ground terminal
14	VR		Reference voltage terminal
15	C7		Bias terminal
16	Vcc		+ B power supply
17	C4		Channel 1 phase compensation capacitor terminal
18	C3		

IC10,IC11:AN6882

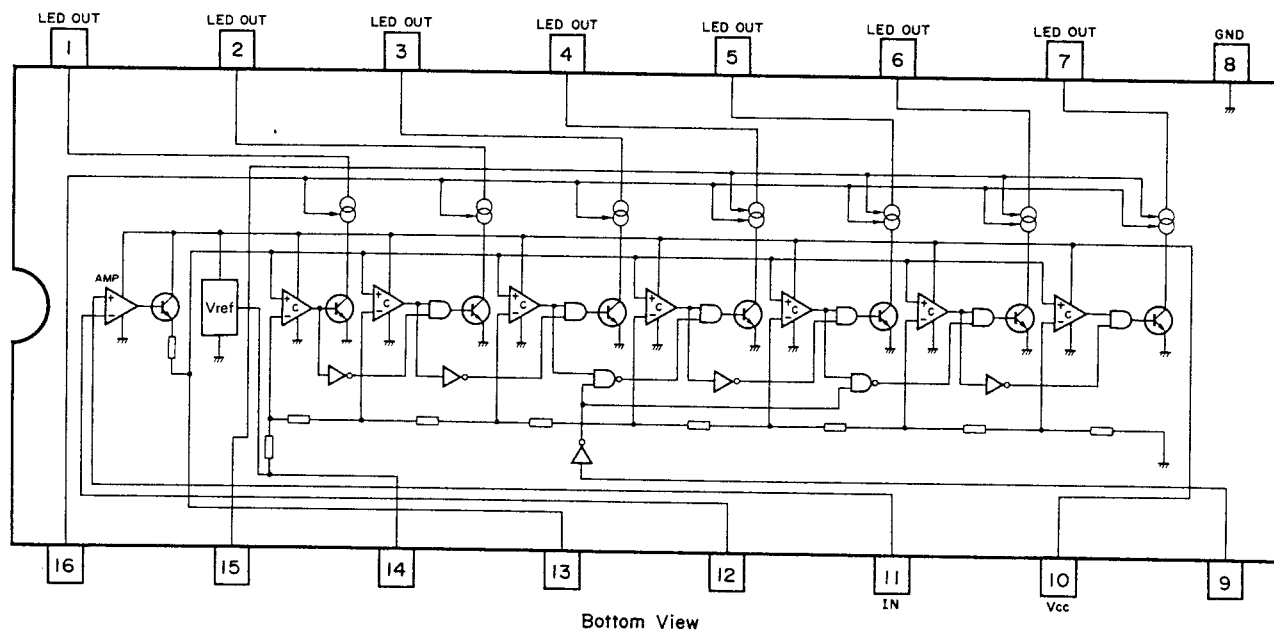

IC12:TA7612AP

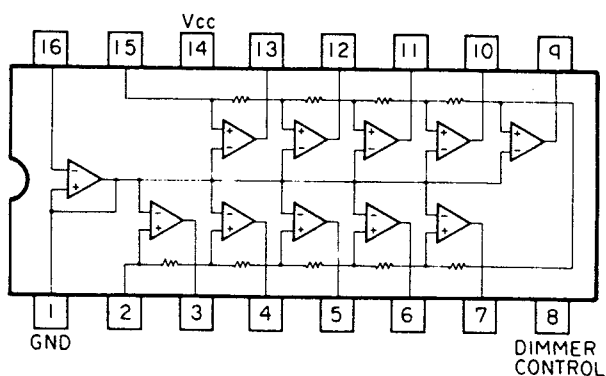

7. CONNECTION DIAGRAM


P.C. BOARD UNIT

A

B

C

D






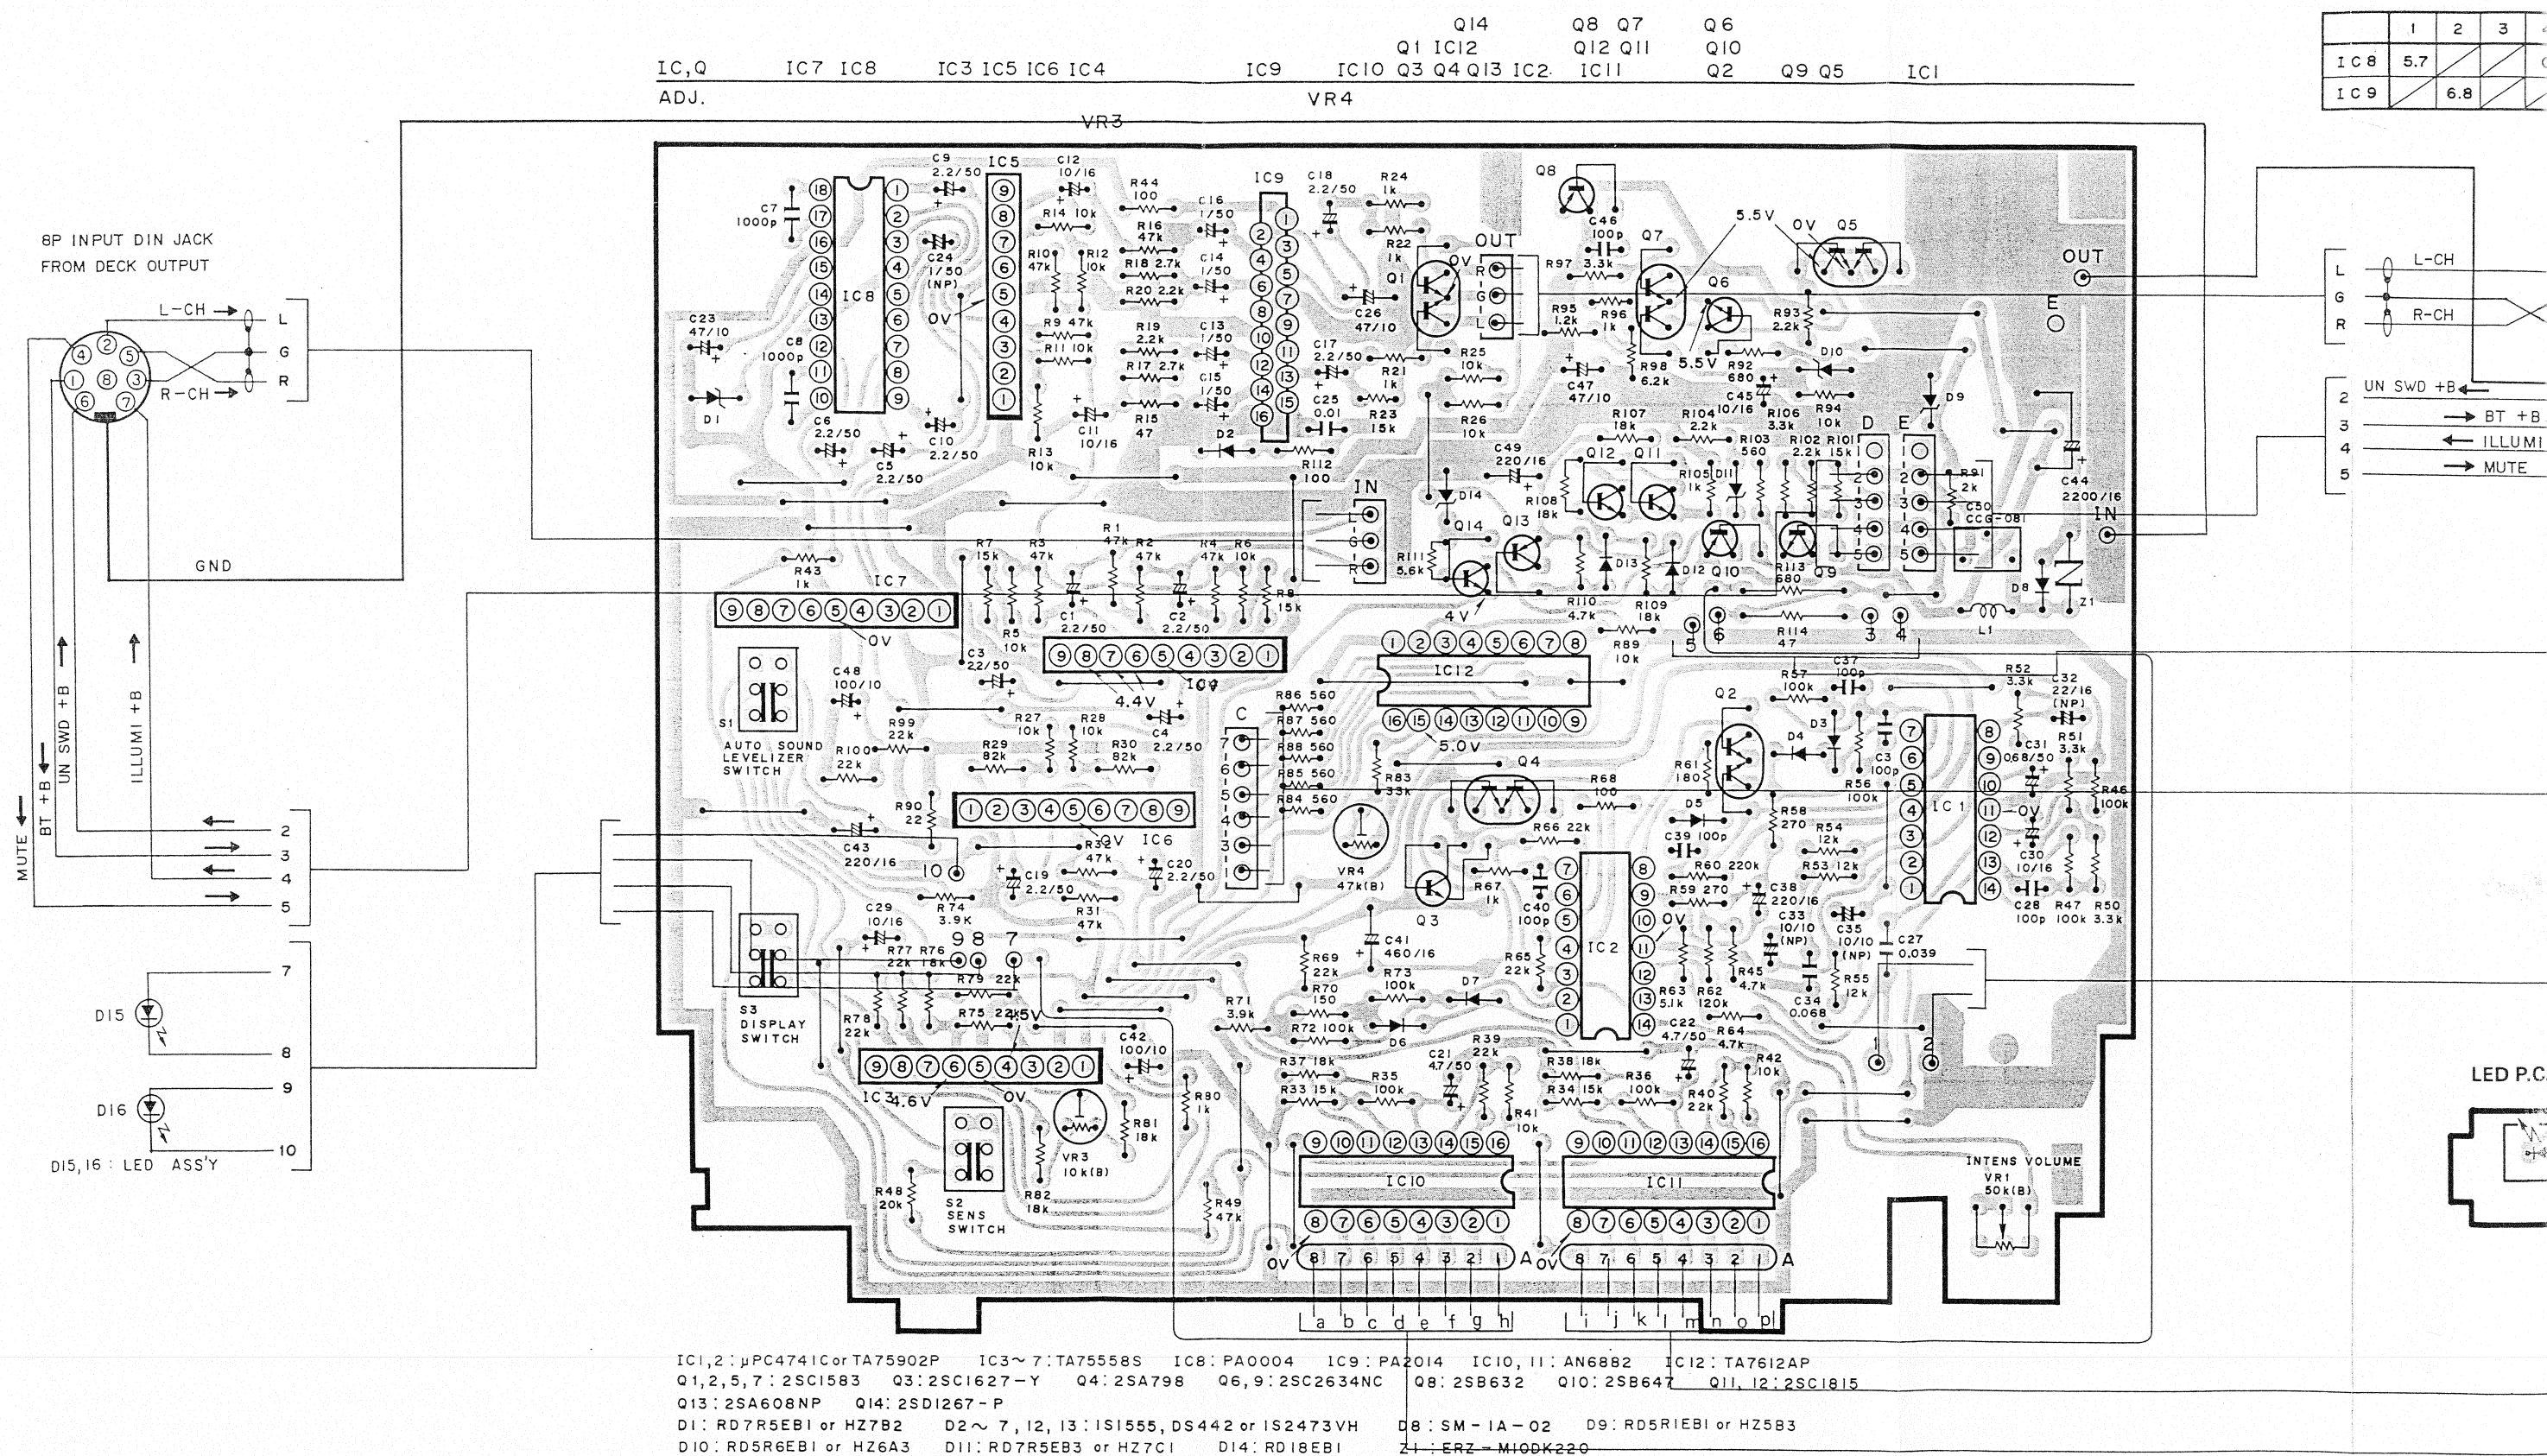


	1	2	3	4
IC8	5.7			
IC9		6.8		

Q14 Q8 Q7 Q6
Q1 IC12 Q12 Q11 Q10
6 IC4 IC9 IC10 Q3 Q4 Q13 IC2 IC11 Q2 Q9 Q5 IC1

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
IC 8	5.7			0	3.8	3.7							0		6.4		6.4	7.9
IC 9		6.8					0	0	0	0			1.6	3.3	0	0		

(V)

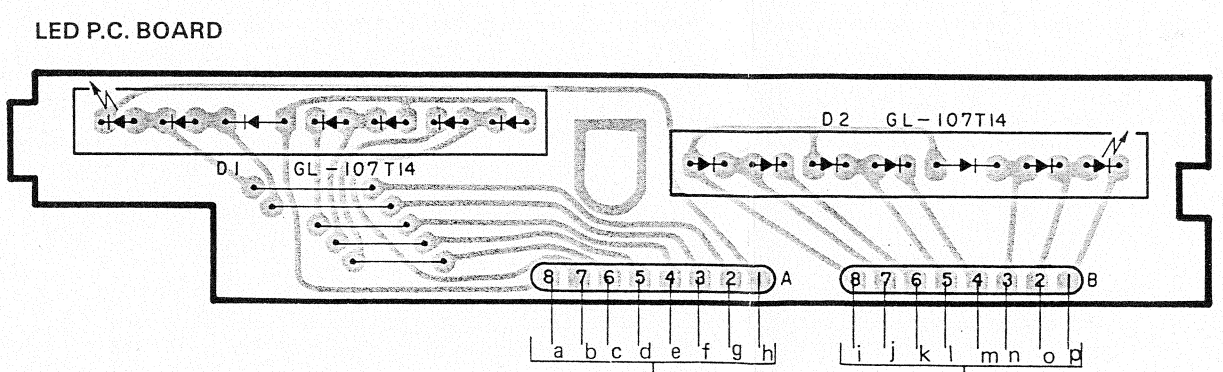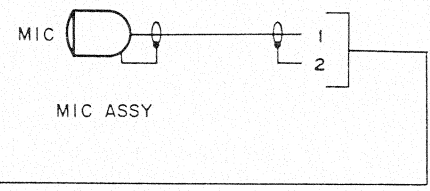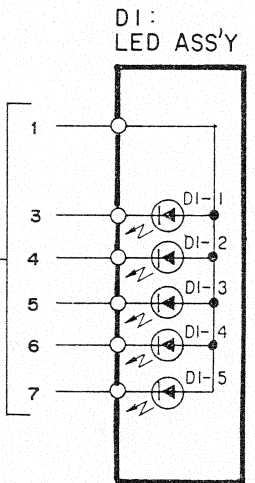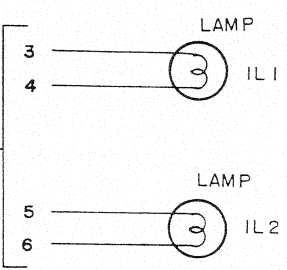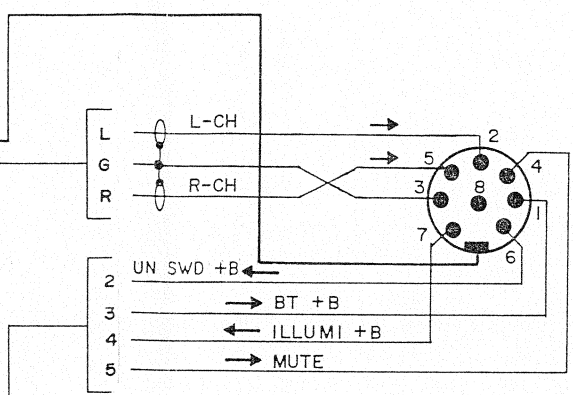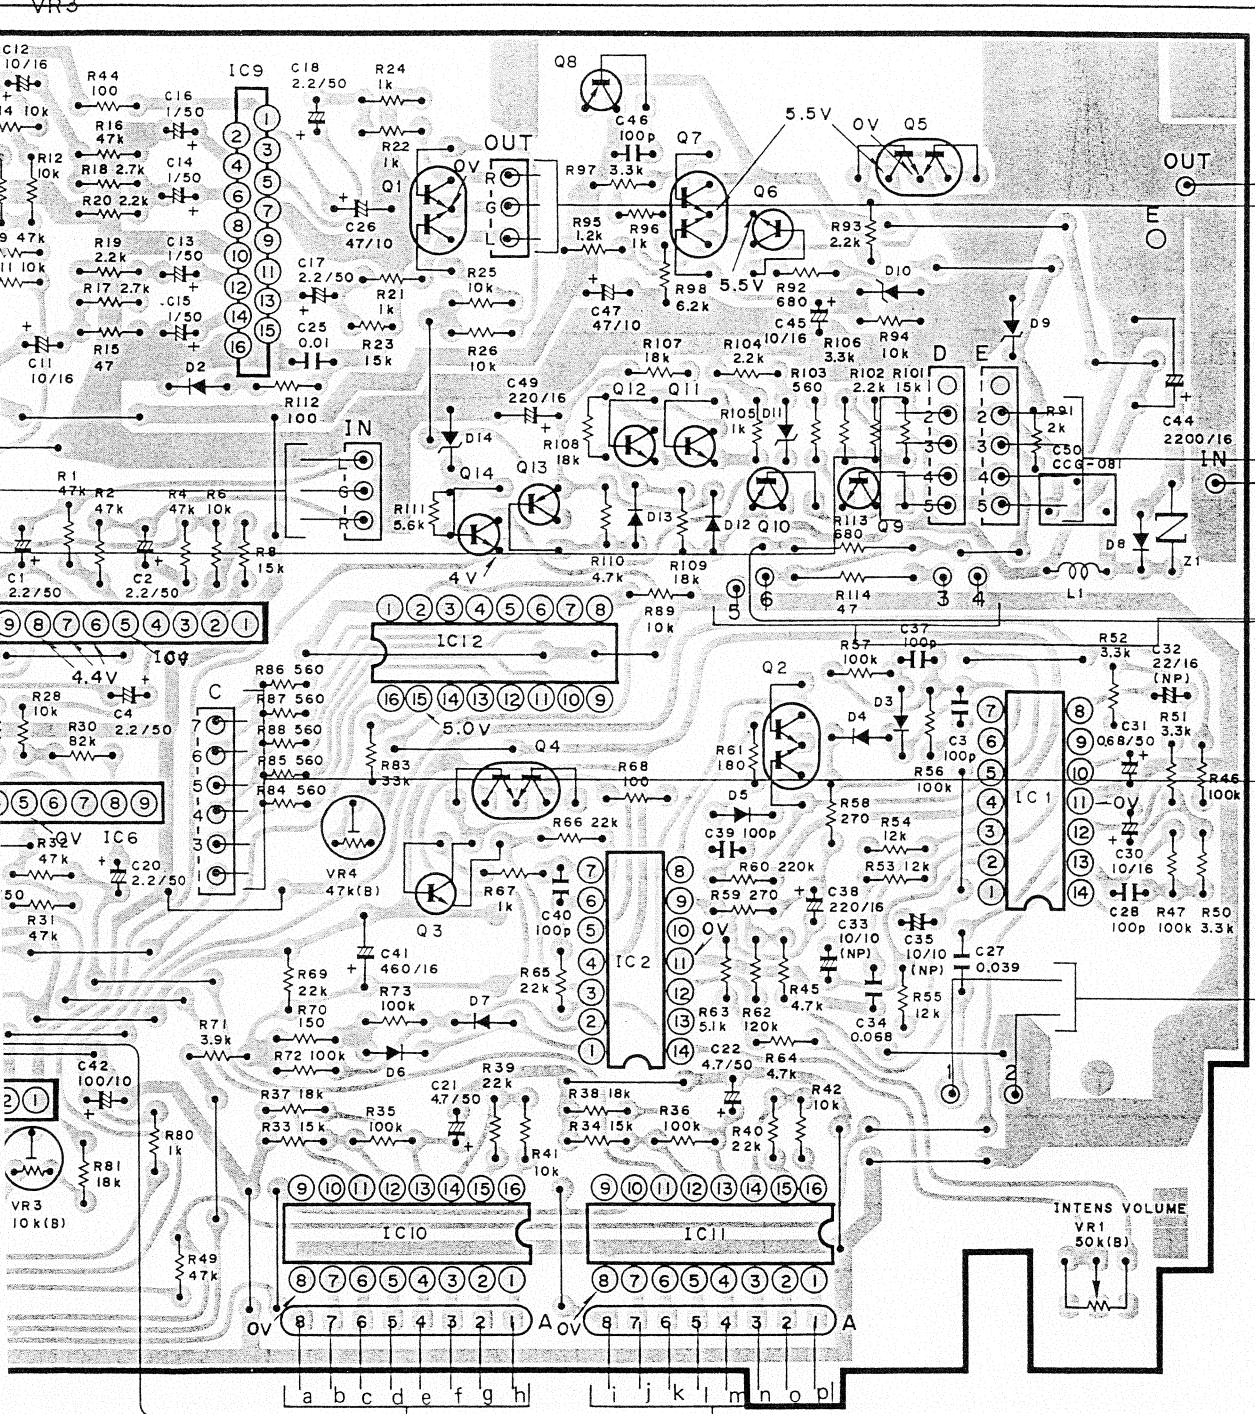

TA75558S IC8: PA0004 IC9: PA2014 IC10, 11: AN6882 IC12: TA7612AP
Q4: 2SA798 Q6, 9: 2SC2634NC Q8: 2SB632 Q10: 2SB647 Q11, 12: 2SC1815
I3: 1S1555, DS442 or IS2473VH Q8: SM-1A-02 D9: RD5RIEB1 or HZ5B3
B3 or HZ7C1 DI4: RD18EB1 Z1: ERZ-M10DK220

Fig. 13

8. SCHEMATIC CIRCUIT DIAGRAM

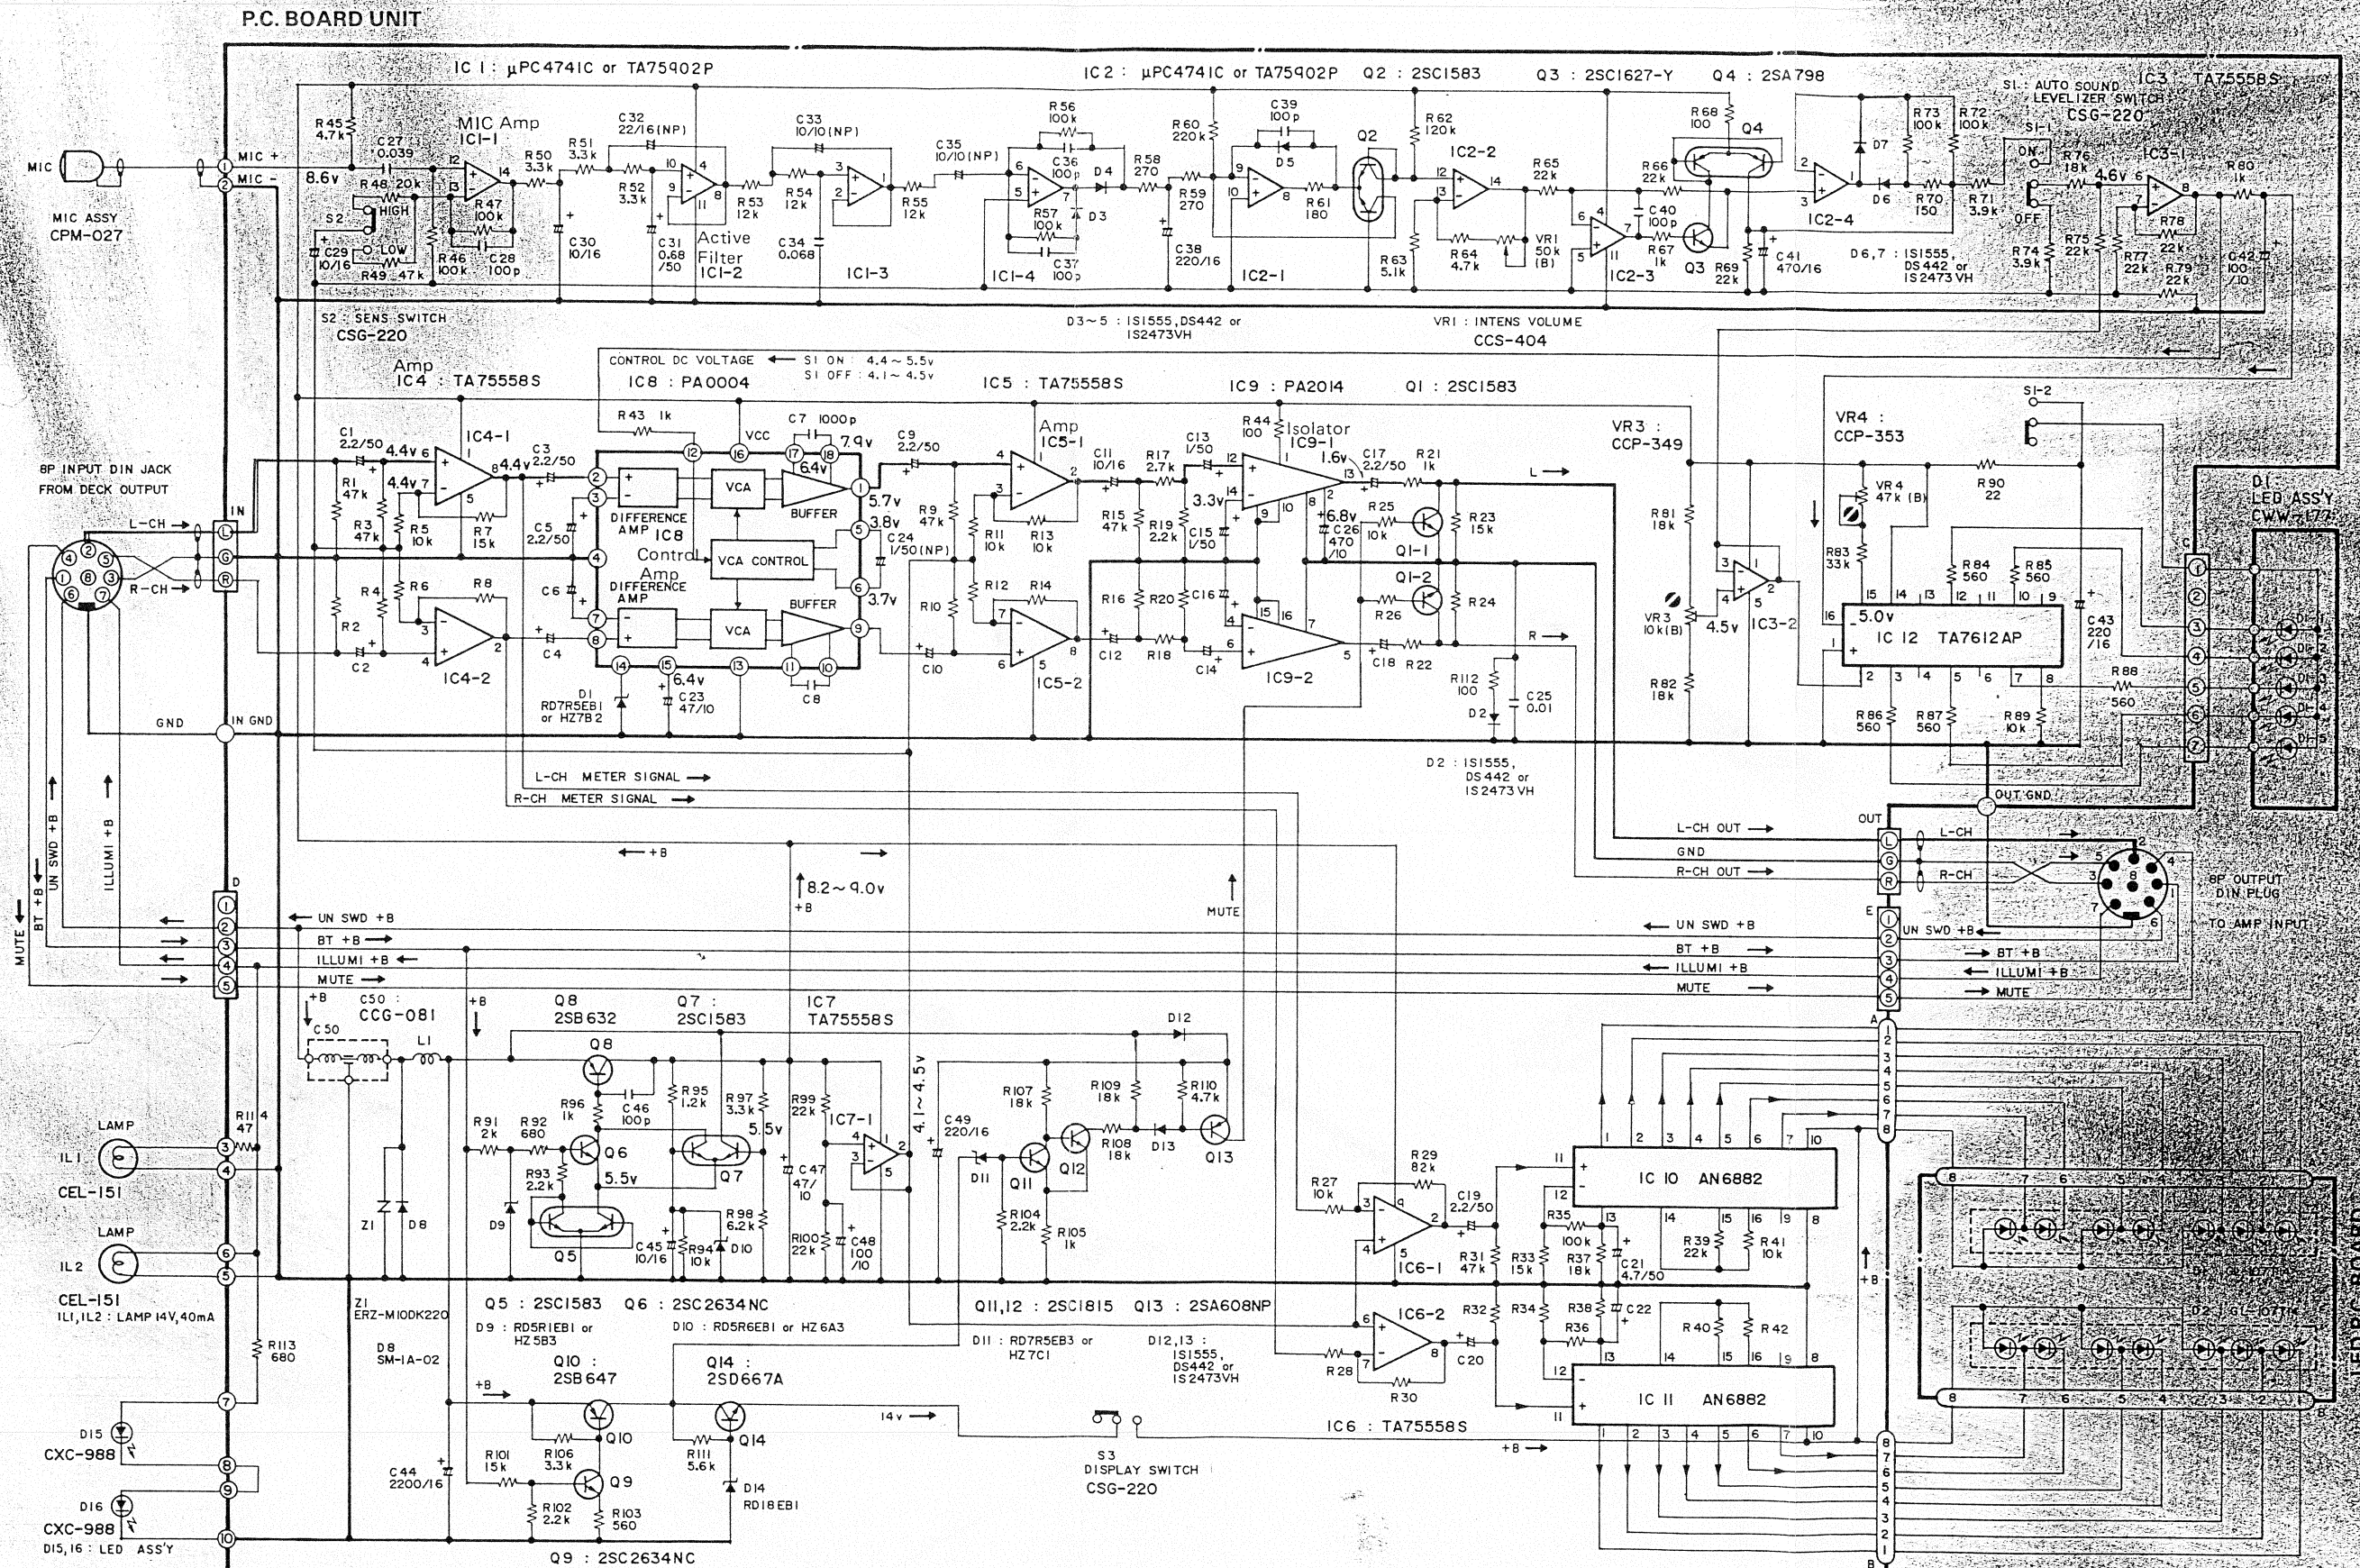


Fig. 14

9. EXPLODED VIEW

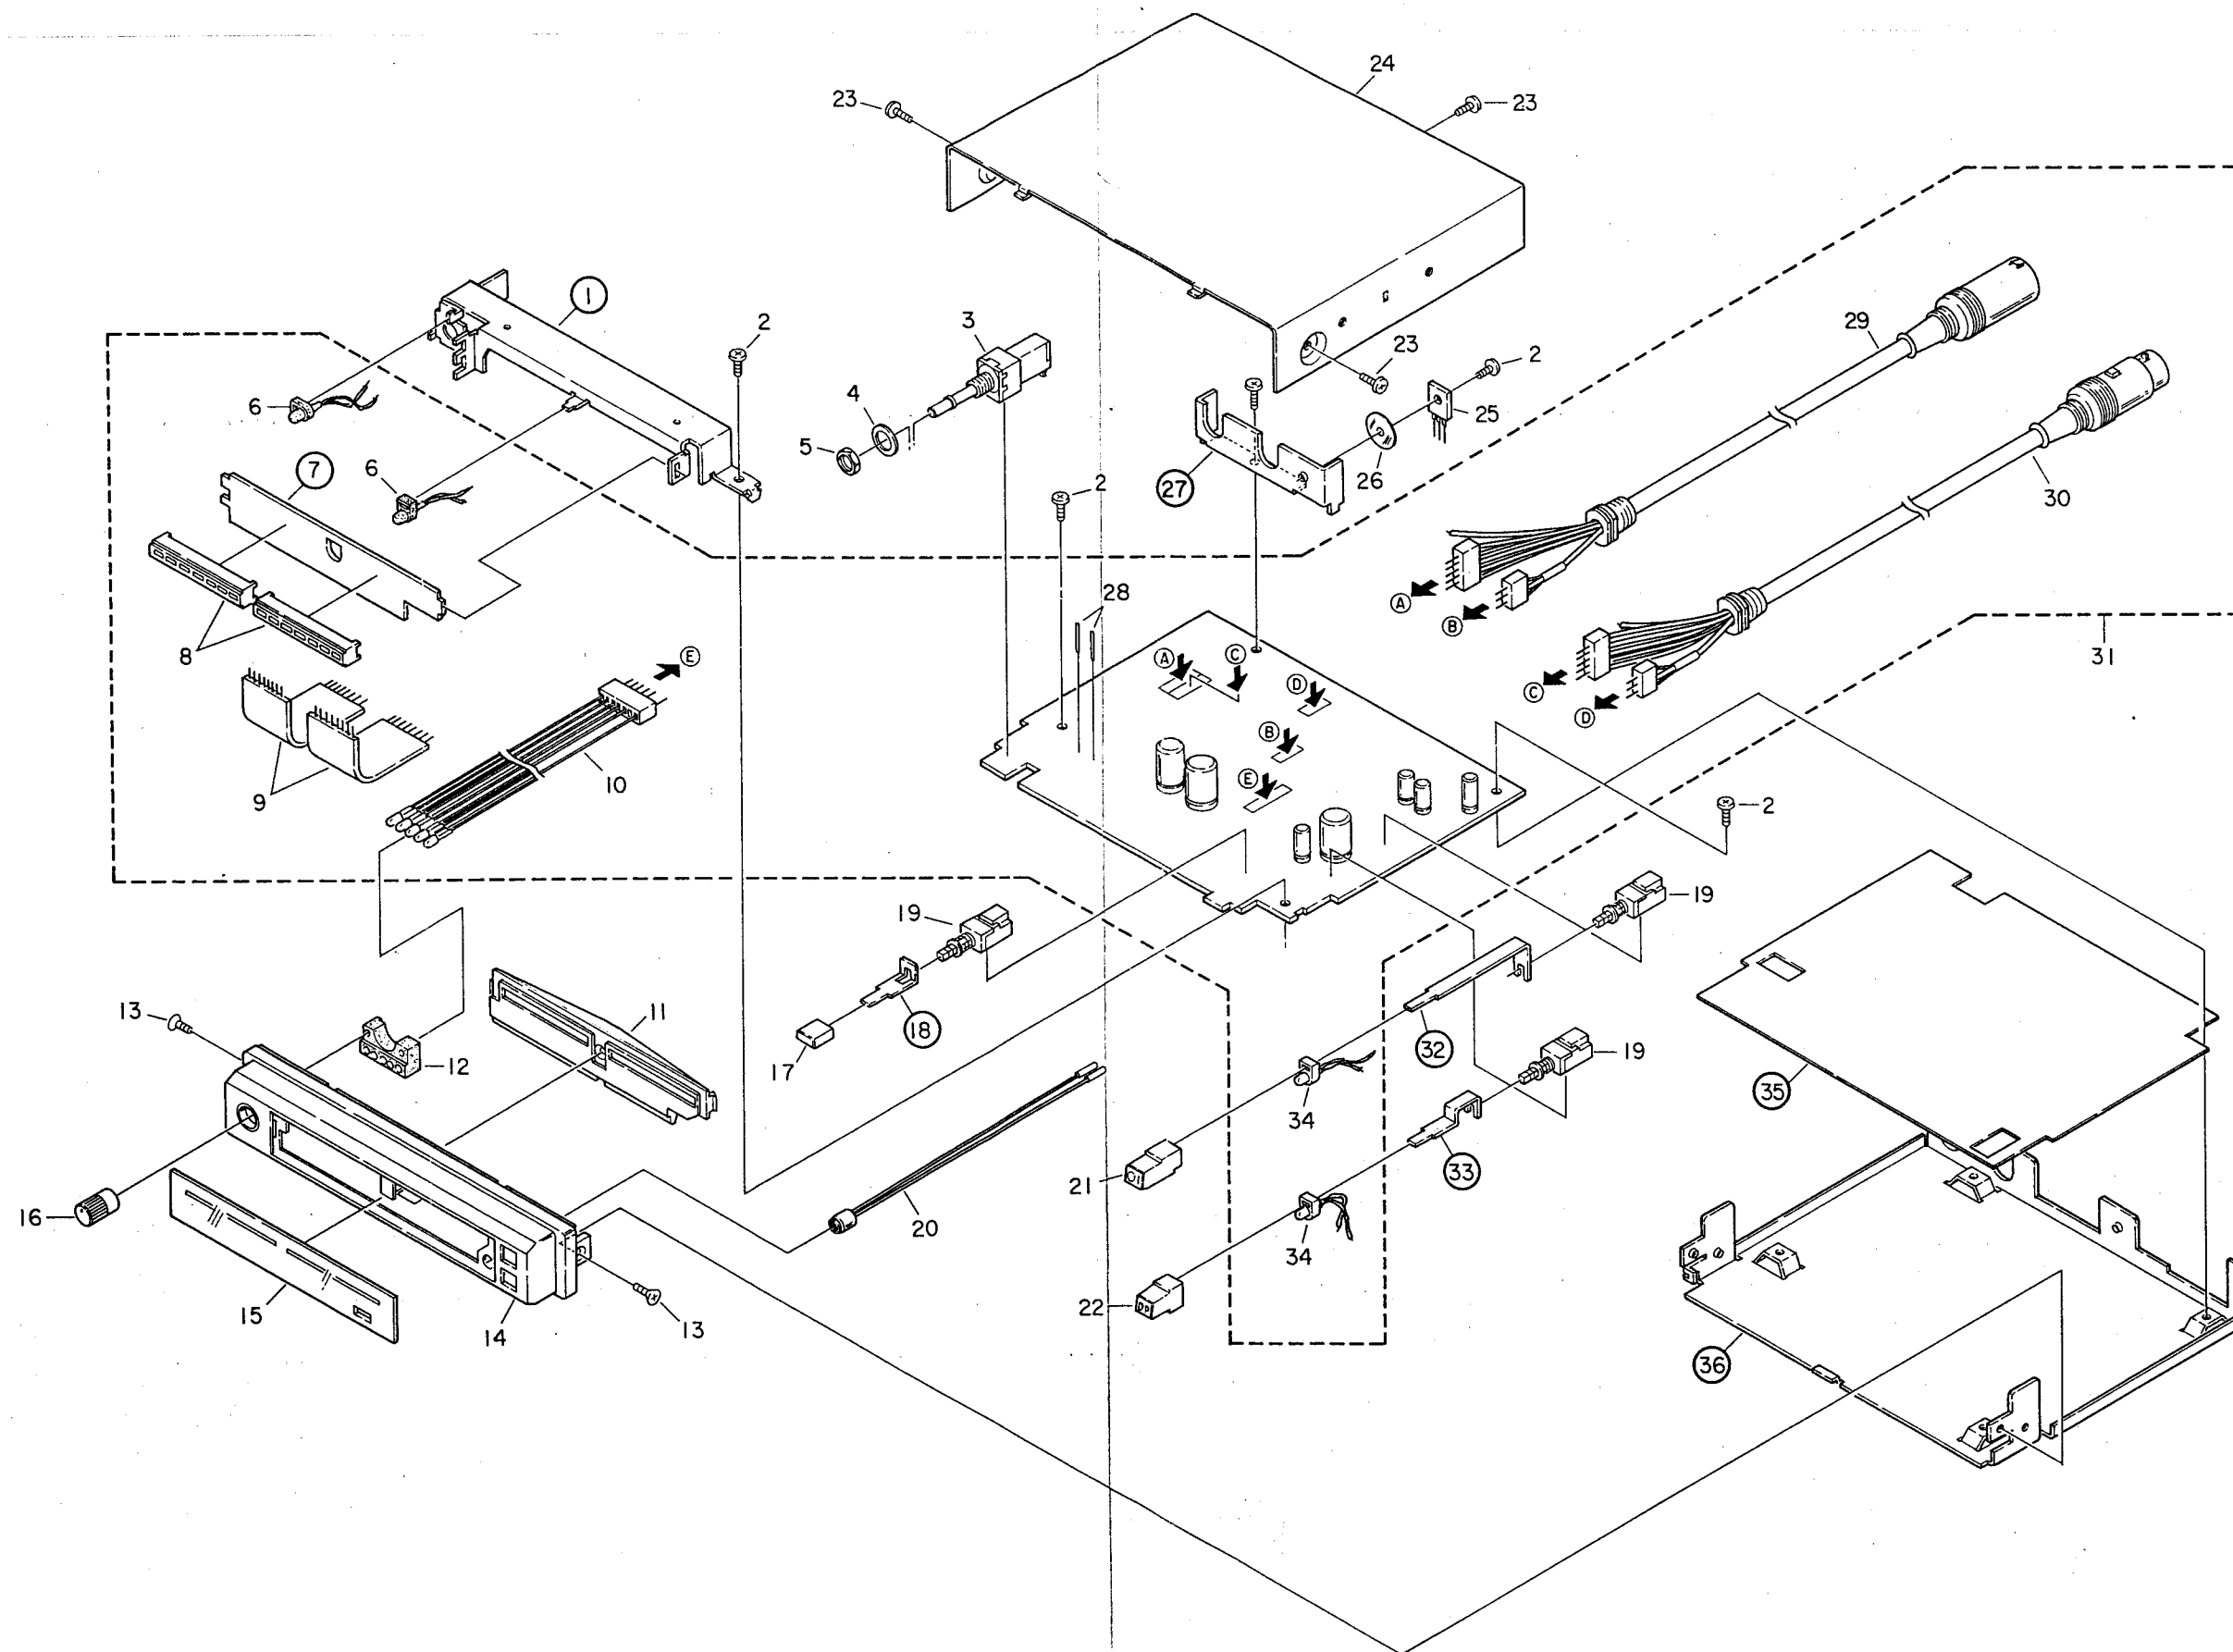


Fig. 15

• Parts List

NOTE:

- For your Parts Stock Control, the fast moving items are indicated with the marks ★ ★ and ★.
★ ★: GENERALLY MOVES FASTER THAN ★.
This classification shall be adjusted by each distributor because it depends on model number, temperature, humidity, etc.
- Parts whose parts numbers are omitted are subject to being not supplied.

Mark	No.	Part No.	Description
	1.		Bracket
	2.	BMZ26P050FMC	Screw
★ ★	3.	CCS-404	Volume, 50k Ω (B) (INTENS)
	4.	CBF-091	Washer (M6)
	5.	CBA-066	Nut (M6)
★ ★	6.	CEL-151	Lamp 14V, 40mA
	7.		P.C. Board
	8.	GL-107T14	LED Array
	9.	CDF-871	Connector (8P)
	10.	CWW-242	LED Assy
	11.	CNK-240	Lens
	12.	CNW-896	Holder
	13.	CMZ26P040FMC	Screw
	14.	CXD-331	Grille Assy
	15.	CNK-239	Scale
★	16.	CAA-451	Knob (INTENS)
★	17.	CAC-898	Button (SENS)
	18.		Lever
★ ★	19.	CSG-220	Switch (SENS, \bigcirc I, DP)
	20.	CPM-027	Mic Assy
★	21.	CAC-896	Button (\bigcirc I)
★	22.	CAC-897	Button (DP)
	23.	CBA-122	Screw
	24.	CNB-856	Case
★ ★	25.	2SB632	Transistor
	26.	CNM-736	Insulator
	27.		Bracket
	28.	CKF-018	Terminal
	29.	CDF-764	Connector (INPUT)
	30.	CDF-763	Connector (OUTPUT)
	31.	CWK-215	P.C. Board Assy
	32.		Lever
	33.		Lever
	34.	CXC-988	LED Assy
	35.		Insulator
	36.		Chassis

I. ELECTRICAL PARTS LIST

TE:
an ordering resistors, first convert resistance values into code form as shown in the
wing examples.

- 1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and
47k ohm (tolerance is shown by J = 5%, and K = 10%).
- 560Ω

56 × 10¹

561

.....

RD1/4PS

561

J
- 47kΩ

47 × 10³

473

.....

RD1/4PS

473

J
- 0.5Ω

0R5

.....

RN2H

0R5

K
- 1Ω

010

.....

RS1P

010

K
- 2 When there are 3 effective digits (such as in high precision metal film resistors).
- 5.62kΩ

562 × 10¹

.....

RN1/4SR

562

1

F

or your Parts Stock Control, the fast moving items are indicated with the marks
★ and ★.
★: GENERALLY MOVES FASTER THAN ★.
his classification shall be adjusted by each distributor because it depends on model
umber, temperature, humidity, etc.
arts whose parts numbers are omitted are subject to being not supplied.

. Board Unit

CELLANEOUS

rk	Symbol & Description	Part No.	Mark	Symbol & Description	Part No.
★	IC1, IC2	μPC4741C or TA7502P	★	D8	SM-1A-02
★	IC3 — IC7	TA75558S	★	D9	RD5R1EB1 or HZ5B3
★	IC8	PA0004	★	D10	RD5R6EB1 or HZ6A3
★	IC9	PA2014			
★	IC10, IC11	AN6882	★	D11	RD7R5EB3 or HZ7C1
★	IC12	TA7612AP			
★	Q1, Q2, Q5, Q7	2SC1583	★	D14	RD18EB1
★	Q3	2SC1627-Y	★ ★	L1	HTF-117
★	Q4	2SA798	★ ★	VR1	CCS-404
				VR2	VACANT
★	Q6, Q9	2SC2634NC	★ ★	VR3	CCP-349
★	Q8	2SB632	★ ★	VR4	CCP-353
★	Q10	2SB647	★	Z1	ERZ-M10DK220
★	Q11, Q12	2SC1815	★ ★	S1 — S3	CSG-220
★	Q13	2SA608NP			
				Switch (SENS, OI, DP)	
★	Q14	2SA667A			
★	D1	RD7R5EB1 or HZ7B2			
★	D2-D7, D12, D13	1S1555 or DS442 or 1S2473VH			

RESISTORS

Mark	Symbol & Description	Part No.
	R1 — R55, R58 — R62, R64 — R111	RA1/4VM□□□J
R63	5.1kΩ	CCN-130

CAPACITORS

Mark	Symbol & Description	Part No.
	C1 — C6, C9, C10, C17 — C20	CEA2R2M50L2
	C7, C8	CCDSL102J50L
	C11, C12, C29, C30, C45	CEA100M16L2
	C13 — C16	CEA010M50L2
	C21, C22	CEA4R7M50L2
	C23, C47	CEA470M10L2
	C24	CEA010M50NPLL
	C25	CQMA103J50L
	C26	CEA471M10L2
	C27	CQMA393J50L
	C28, C36, C37, C39, C40, C46	CCDSL101J50L
	C31	CEAR68M50LL
	C32	CEA220M16NPLL
	C33, C35	CEA100M10NPLL
	C34	CQMA683J50L
	C38, C43, C49	CEA221M16L2
	C41	CEA471M16L2
	C42, C48	CEA101M10L2
	C44	2200 μ F/16V CCH-058
	C50	CCG-081

LED P.C. BOARD

Mark	Symbol & Description	Part No.
	D1, D2 LED Array	GL-107T14

Miscellaneous Parts List

Mark	Symbol & Description	Part No.
★ ★	IL1, IL2 Lamp 14V, 40mA	CEL-151
	D1 LED Assy	CWW-242
	D15, D16 LED Assy	CXC-988
	MIC MIC Assy	CPM-027

11. PAKING METHOD

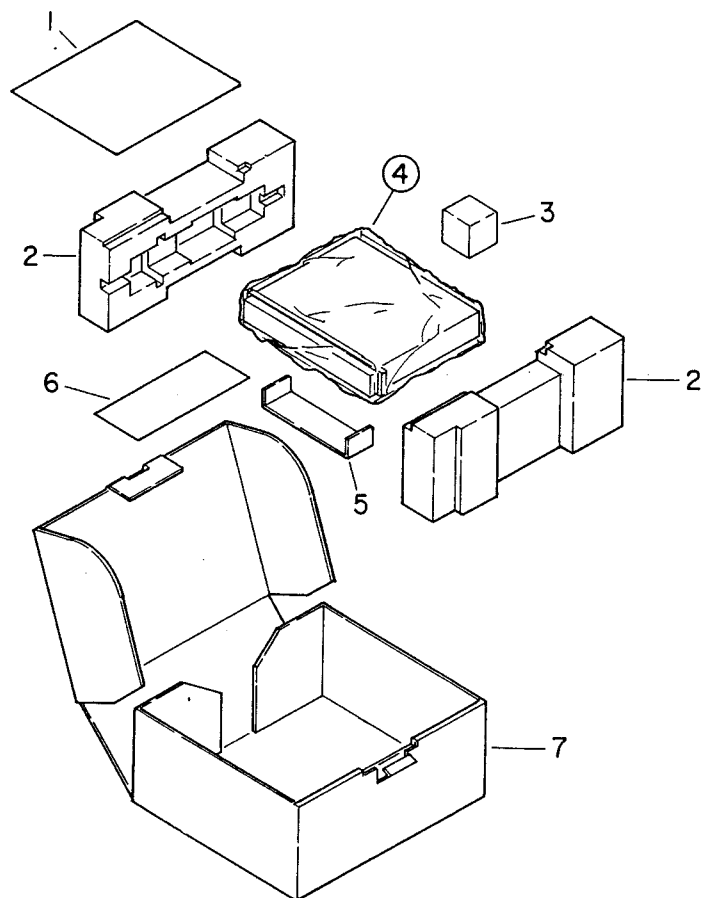


Fig. 16

• Parts List

Mark	No.	Part No.	Description	Mark	No.	Part No.	Description
	1	CRA-503	Owner's Manual (English, French, German, Spanish, Italian)	6-3	CEA-901	Screw kit	
	2	CHD-420	Styroform (1 set pair)	6-3-1	B70-056-A	Nut (M5)	
	3	CHD-732	Styroform	6-3-2	CBA-101	Screw (M4×6)	
	4		Cover	6-3-3	CBA-102	Screw (M5×16)	
	5	CNB-783	Mounting Bracket	7	CHD-742	Carton	
	6	CEB-051	Accessory Kit				
	6-1	VACANT					
	6-2	CDE-437	Cord				